


**IMPORTANT:
THESE INSTRUCTIONS ARE TO REMAIN
WITH THE HOMEOWNER**


These instructions are supplementary to the Installation and Operating Instructions supplied with the fireplace and should be kept together. Refer to the Installation and Operating Instructions for proper gas supply, safety requirements and operating instructions.

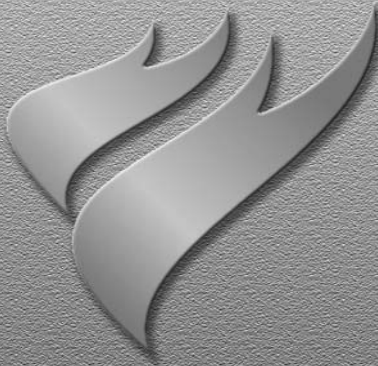

TOWN & COUNTRY
LUXURY FIREPLACES

LOW NOISE HORIZONTAL FLUSH MOUNT POWER VENT KIT

(FOR MAXIMUM 6' HORIZONTAL RUNS)

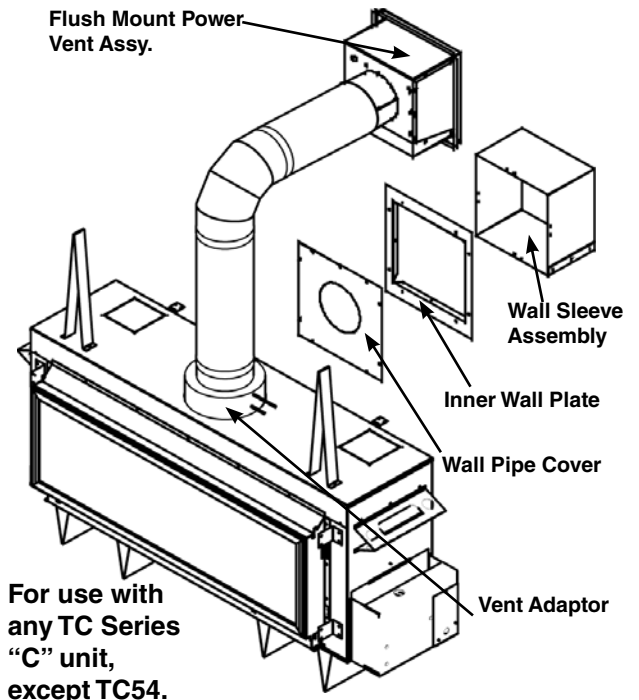

**TCVT.FMPV3
INSTALLATION AND
OPERATING
INSTRUCTIONS**

PAINT:

The vent terminal comes pre-painted with Thurmalox 230 Series paint by Dampney Co., but can be painted to match your wall finish color using high temperature paint that can withstand temperatures of at least 250 degrees Fahrenheit or 120 degrees Celcius.

Ensure the your paint is compatible with Thurmalox 230 Series paint.

MINIMUM CLEARANCES TO COMBUSTIBLE

Terminal casing:
0in. (0mm)

Vertical vent pipe:
1.5 in. (38mm)

Horizontal vent pipe:
1.5 in. (38mm)

All other clearances are as per the fireplace installation instructions.

Power Vent Installation

Locate the fireplace as per the main instructions supplied. Make the following modifications to add the components used with the Flush Mount Power Vent Kits. This Kit can only be used in conjunction with the "C" series versions of Town and Country fireplaces, except the TC54.CE2. This installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or the Natural Gas and Propane Installation Code, CSA B149.1.

All electrical installations should be performed by a qualified electrician to the Canadian and U.S. National Electrical Codes (CSA C22.1 for Canada), (ANSI/NFPA 70 for the U.S.) and/or local electrical codes.

Contents of Power Vent Kit

ITEM	PART No.	DESCRIPTION	QTY
1	TCVT.8043	Flush Mount Power Vent Assy.	1
2	5096.816	Venting Adaptor	1
3	TCVT.506271C	Pressure Switch Wiring	1
4	5027.15	Pressure Switch	1
5	8024	Tubing, TYSC-516316-100	2
6	5093.01	Hose Clamp	2
7	5093.02	Hose Clamp	2
8	TCVT.507156C	Power Vent Switch Wire	1
9	8271	TCWS.54CE2 Pressure Switch Bracket	1
10	9280	TC Pressure Switch Bracket	1

Fig. #1


Power Vent

VENTING CONFIGURATIONS

Maximum total horizontal vent length is 6ft. Minimum total vent length is 3 ft plus one 90-degree elbow. Ensure vent pipe is properly supported.


For every 90-degree elbow after the first transition, subtract 2' from max. horizontal run.

Min. 1 1/2" Clearance to combustible surfaces from vent pipe.

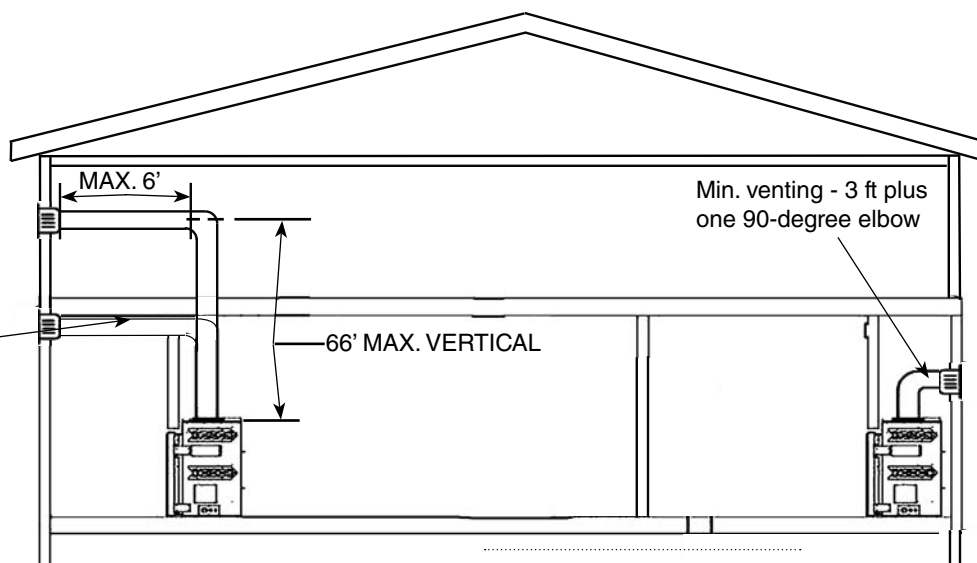

Minimum Vent Length Chart

Fig. #2

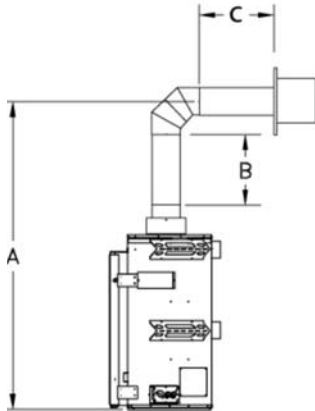


A						B	C
Minimum Rise From Floor to Flue Center						Pipe Length	Min. Pipe Length
TCWS54	TCWS38	TC30	TC36*	TC 42	TC36ST		
49"	45"	47"	51"	57"	56"	0"	3 feet
61"	57"	59"	63"	69"	68"	12"	2 feet
73"	69"	71"	75"	81"	80"	24"	1 foot

*TC36 and TC36AR have the same dimensions

This power vent kit cannot be used on model TC54.CE2

Vent Terminal Minimum Clearances

Fig. #3

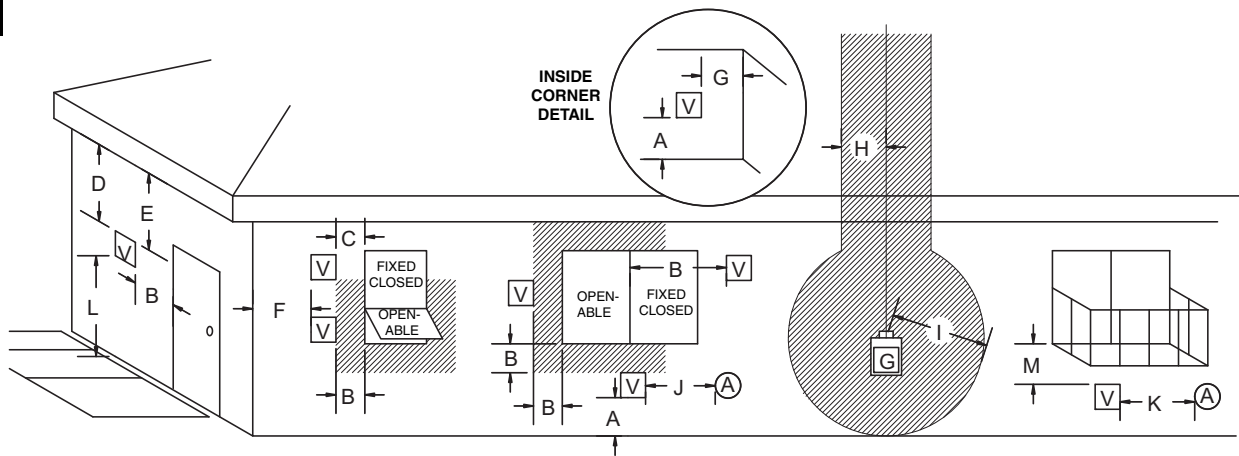

V VENT TERMINAL

A AIR SUPPLY INLET

■ AREA WHERE TERMINAL IS NOT PERMITTED

G GAS METER

- A= clearances above grade, veranda, porch, deck, or balcony [* 12 inches (30 cm) minimum]
- B= clearance to window or door that may be opened [* 12 inches (30 cm) minimum]
- C= clearance to permanently closed window [minimum 12 inches (30 cm) recommended to prevent condensation on window]
- D= vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (60 cm) from the edge of the terminal [0 inches (0 cm) minimum]
- E= clearance to unventilated soffit [0 inches (0 cm) minimum]
- F= clearance to outside corner [6 inches (15 cm) minimum]
- G= clearance to inside corner [3 inches (7.5 cm) minimum]

- H= * not to be installed above a meter/regulator assembly within 3 feet (90 cm) horizontally from the center-line of the regulator
- I= clearance to service regulator vent outlet [* 6 feet (1.8 m) minimum]
- J= clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance [* 12 inches (30 cm) minimum]
- K= clearance to a mechanical air supply inlet [* 6 feet (1.8 m) minimum]
- L= ^ clearance above paved side-walk or a paved driveway located on public property [* 7 feet (2.1 m) minimum]
- M= clearance under veranda, porch, deck, or balcony [0 inches (0 cm) minimum**]

^ a vent shall not terminate directly above a side-walk or paved driveway which is located between two single family dwellings and serves both dwellings*

** only permitted if veranda, porch, deck, or balcony is fully open on a minimum of 2 sides beneath the floor*

* as specified in CGA B149 Installation Codes, Note: local Codes or Regulation may require different clearances

* for U.S.A. Installations follow the current National Fuel Gas Code, ANSI Z223.1

Horizontal (Side Wall) Venting

This kit uses either Simpson Duravent GS direct vent pipe, Secure Vent direct vent pipe, Selkirk Direct-temp vent pipe or ICC Exceldirect vent pipe with a 5" inner pipe and an 8" outer pipe. For part numbers see the table of venting components on page 10 of this manual. This vent can only be used as a side wall termination.

CAUTION:

This terminal is designed to be finished flush to the finished outside wall; under no circumstances should this terminal be recessed into the wall past this point. (Fig. #8)


1. Attach the vent adaptor directly to the appliance with the three screws and seal outer pipe with aluminium tape provided. (Fig. #4)

Note: The inner pipe does not need to be sealed.

2. Connect one of the high temperature silicone tubes to the upper pressure tap (marked "LOW") on the adaptor. (Fig. #4) Secure with the hose clamp provided and route the tube through any hole back to the control box. This tube will be connected to the "low" side of the pressure switch inside the control compartment. (Fig. #17) Connect the second tube to the lower pressure tap (marked "HIGH") and route to the control box as before. Connect this tube to the remaining port on the pressure switch.

Tubes may touch unit and be trimmed if required.

Note: Ensure that there are no blockages in these tubes, as this will cause the control to malfunction.

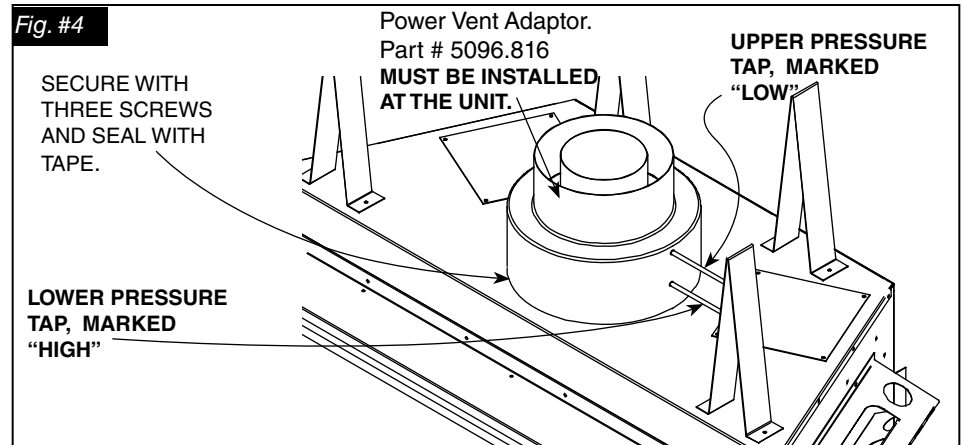

CAUTION:

The adjustable vent restrictor located on the underside of the firebox top must be fully open.


3. Locate the power vent termination following the clearance to combustible table (Page 2), venting configuration diagram (Fig. #1 & 2), and terminal location diagram (Fig. #3).

4. Cut and frame a 14 1/2" wide by 14 3/4" high opening. For standard up and out installations, the opening should be 3/4" lower than the minimum specified in Fig. #2. Height of the opening will vary with each installation. See Fig. #5.

5. Attach the power vent terminal, by securing the outer flanges on the perimeter of the terminal to the outside wall; ensure that the terminal is the right way up (exhaust at the bottom). Once secured to the building, the outer flanges may be covered with siding/ stucco/etc. up to the level of the perimeter edge. As per local building codes. See Fig. #6.

6. For wall thicknesses 7 1/2" or less, install the inner wall plate supplied over the terminal as shown in Fig. #6 and secure to the framing. See Fig. #7.

Fig. #5

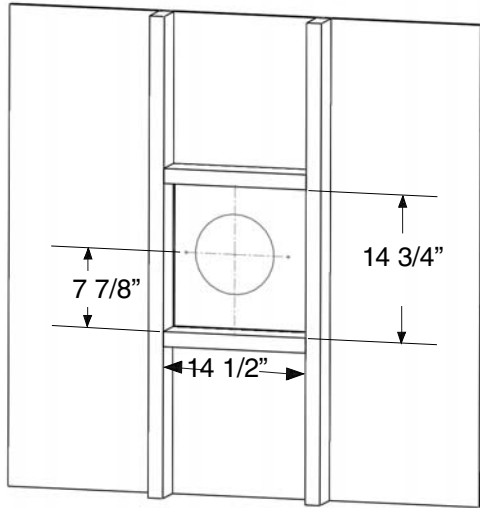

CAUTION:
The rise and run combination and the number of elbows must not exceed specifications in Fig #1 and Fig #2.

Fig. #7


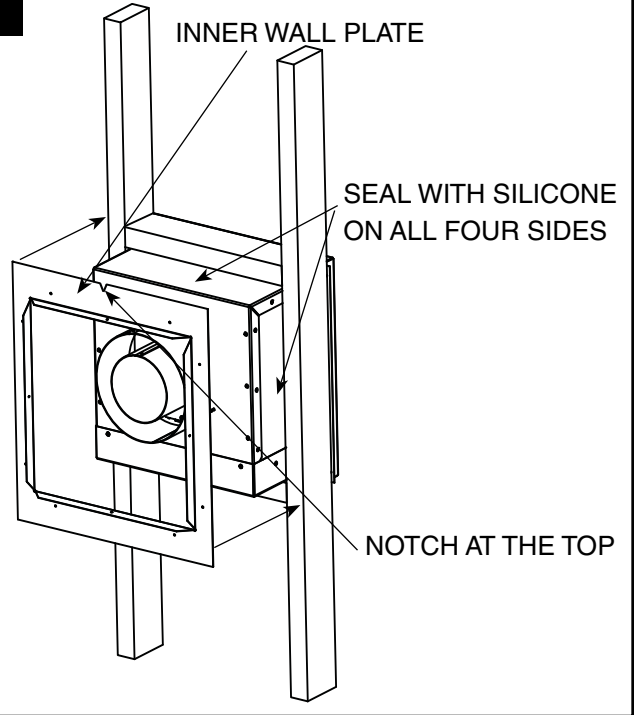


Fig. #6




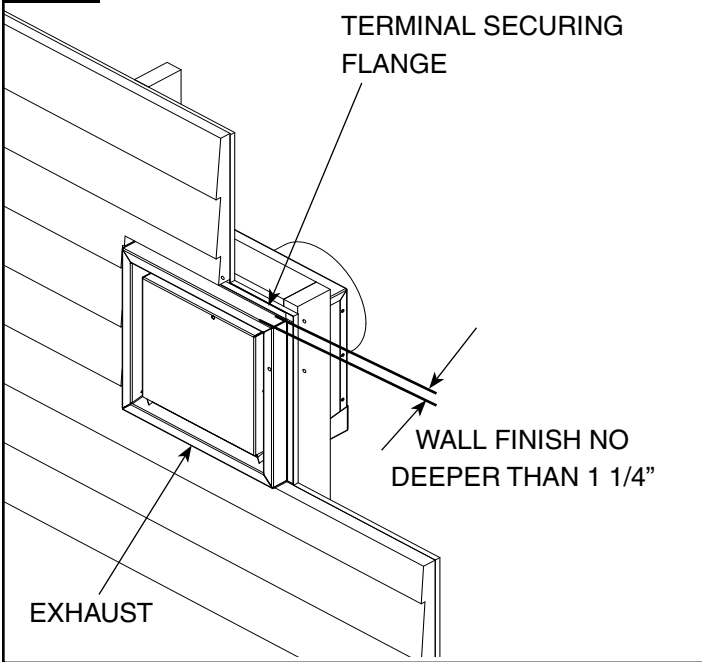


7. For wall thicknesses greater than 8" and up to a maximum of 16 1/2", attach the inner wall plate to the wall sleeve assembly, using the four screws provided (Fig #8). Then slide this assembly over the terminal with the notch at the top (Fig #9 & Fig. #10).

8. Slide the wall pipe cover, with the small notch oriented at the top, over the vent pipe and attach pipe to the fireplace. (Fig #11) Connect the vent pipe to the vent terminal and then secure the inner wall plate and wall pipe cover to the framing. This ensures that any insulation is retained in the wall and that the correct clearances are maintained.

9. Run the required Simpson DuraVent GS / Secure Vent / Selkirk Direct-temp or ICC Exceldirect pipe from the adaptor to the terminal assembly. Assemble as per the vent pipe manufacturer's instructions including all shields and firestops.




NOTE: The vent terminal comes pre-painted, but can be painted to match your wall finish color using high temperature paint that can withstand temperatures of at least 250 degrees Fahrenheit or 120 degrees Celcius.

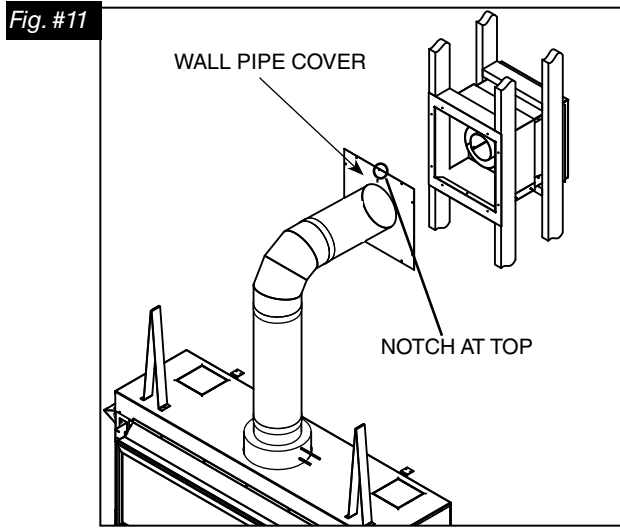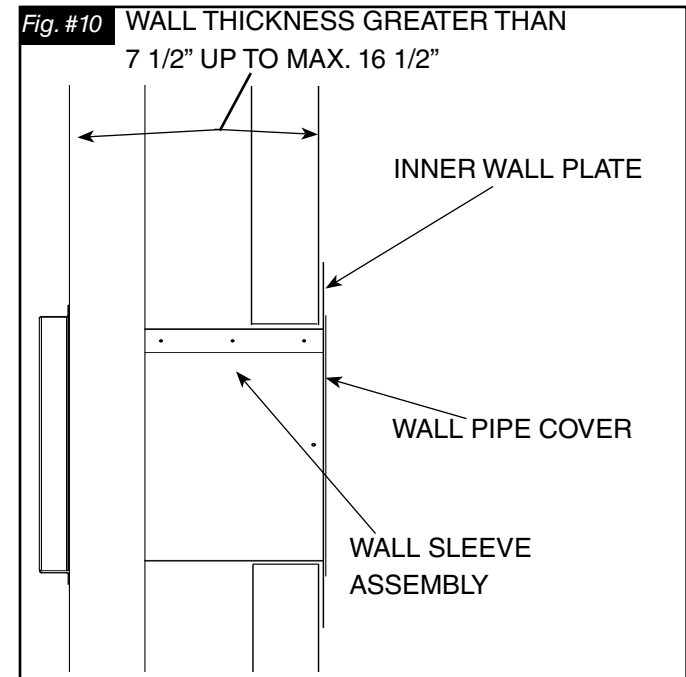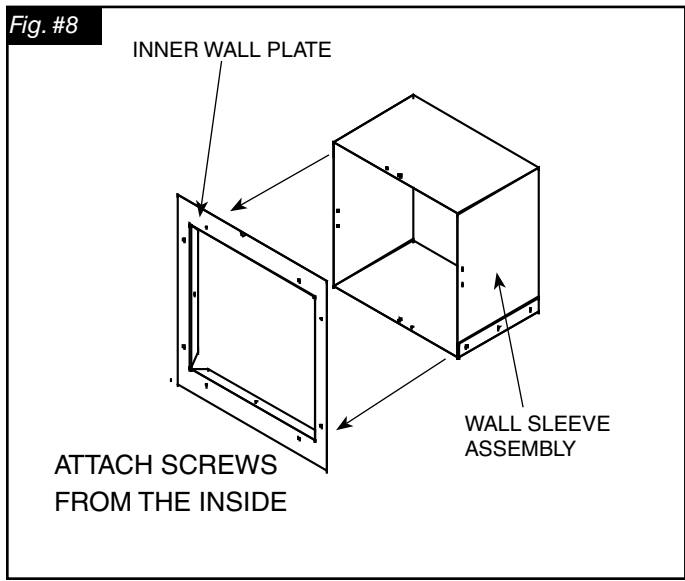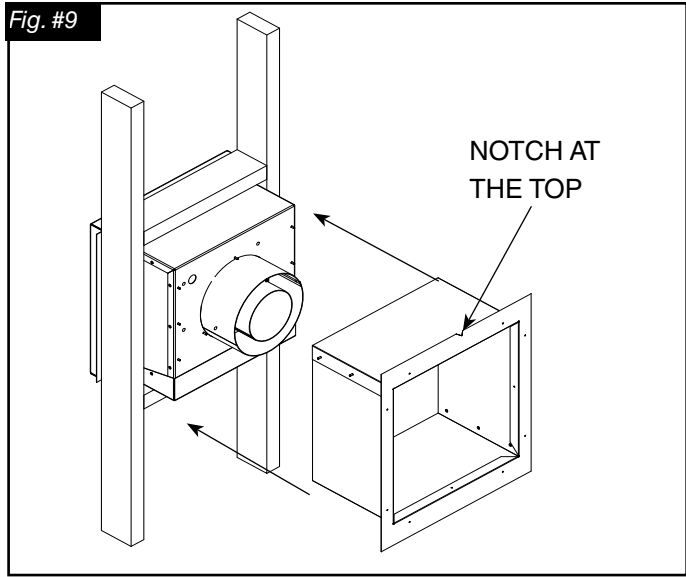

Control System Connection


The gas control system is located on the right hand side of the firebox behind an access panel and the decorative panel.

1. Burner assembly, burner media and/or decorative panels may need to be removed if already installed (see main installation manual for details).
2. Remove access panel located on the right hand side of the firebox (Fig. #12).
3. Locate and disconnect the spade connectors in the black wire loop on the right side of the module and in the orange wire running from the module to the socket labelled "pilot" on the valve (Fig. # 13 and 14).
4. Using the jumper wires provided, connect the 120V "hot" supply wire to one of the black wires from the control module. Then connect the "hot" wire from the power vent blower to the other black wire on the control module, (Fig. #15). The module acts as a switch to turn on the power vent blower. (Also see wiring diagram on Pg.13)

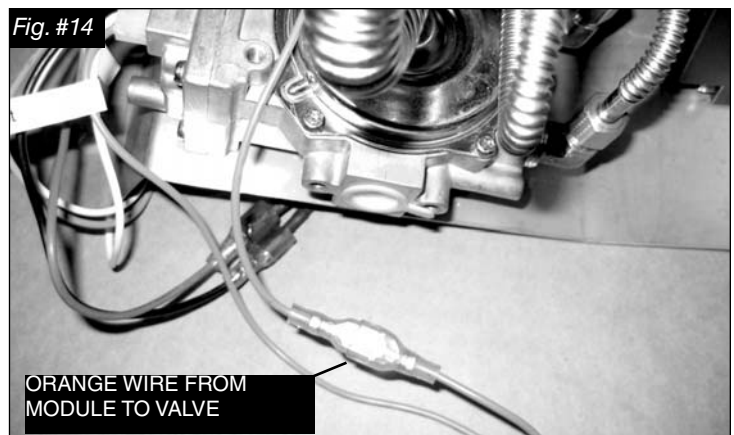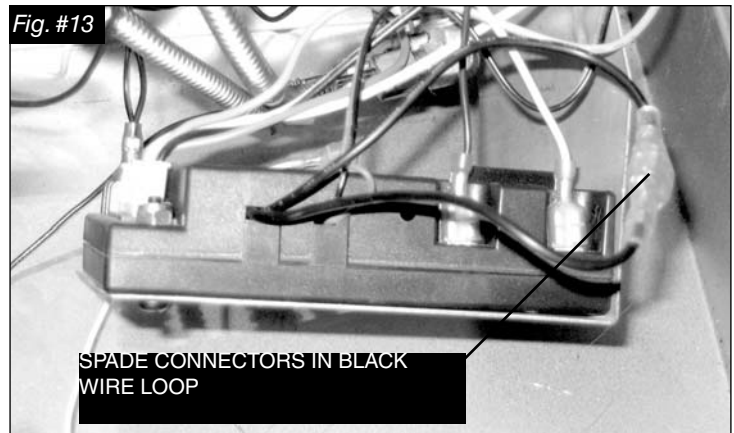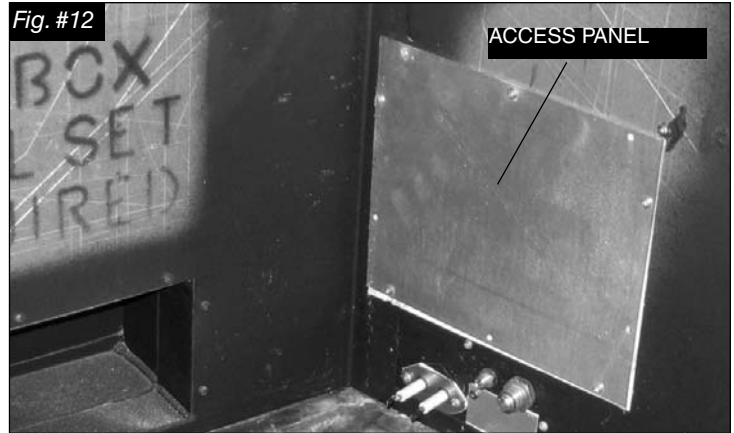

HOT WIRE FROM BLOWER


HOT WIRE FROM 120V SUPPLY

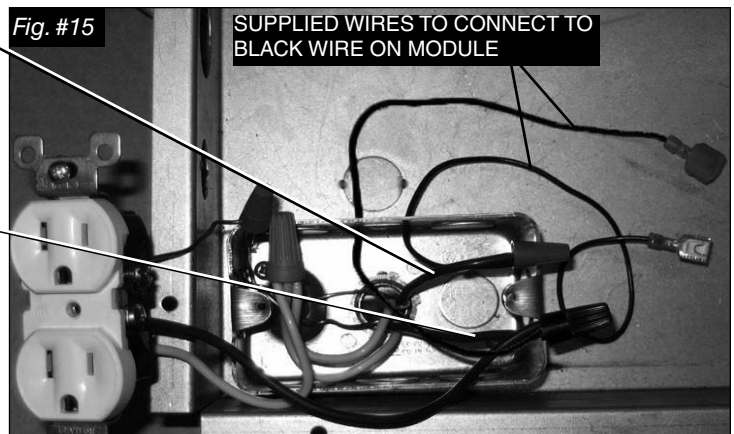

Pressure Switch Installation

1. Connect the pressure switch jumper wires to the orange wire (Fig. # 16).
2. Attach the silicone tube from the upper pressure tap on the power vent adaptor (Fig. #4) to the “low” port of the pressure switch. Attach the other silicone tube from the lower pressure tap to the “high” port of the pressure switch (Fig. #17).
3. Secure the pressure switch in the control box using the screw provided (Fig. #18).
4. Continue with installation and reassemble all of the parts previously removed.

Fig. #16

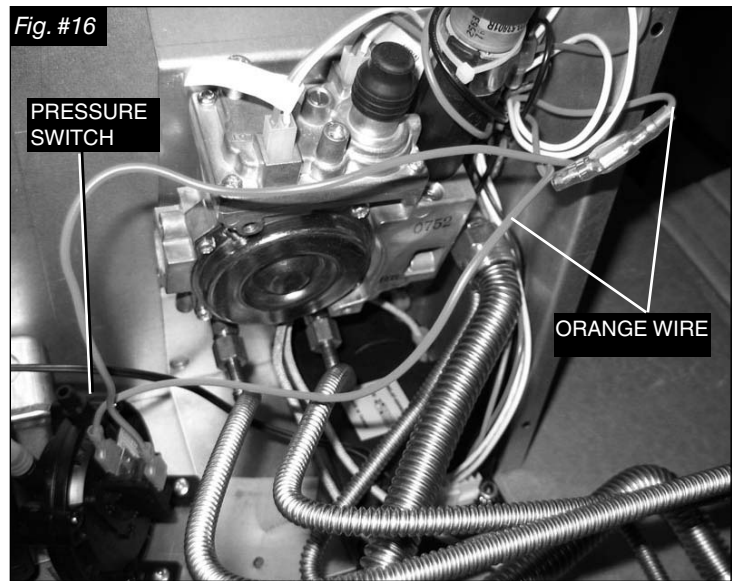

This power vent system can only run on 115 V AC. Before operating the unit, the battery backup located behind the wall switch receiver must be removed. The red “Low Battery” light will continue to flash. This is not a fault indicator.

WARNING: This switch must be installed in a vertical position and will not function if installed otherwise. (Fig. 16)

Fig. #17

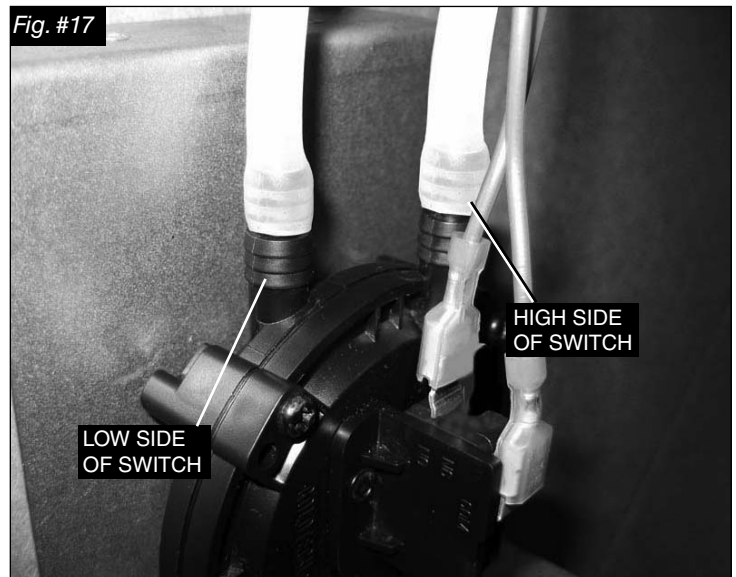


Fig. #18a



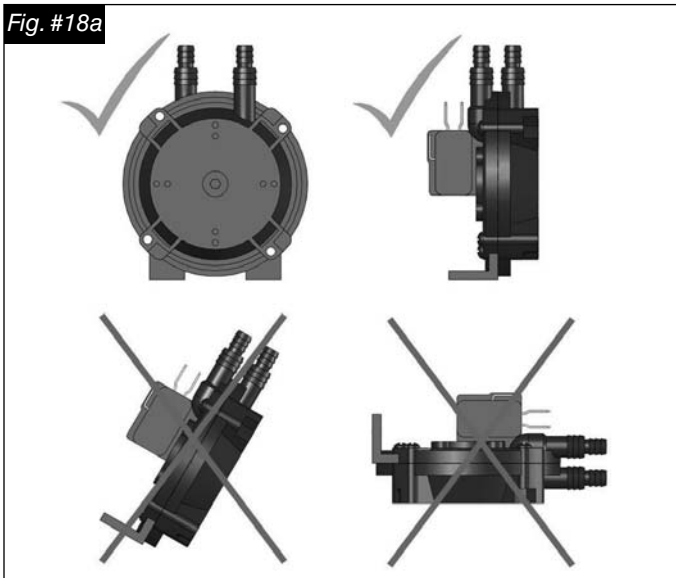


Fig. #18

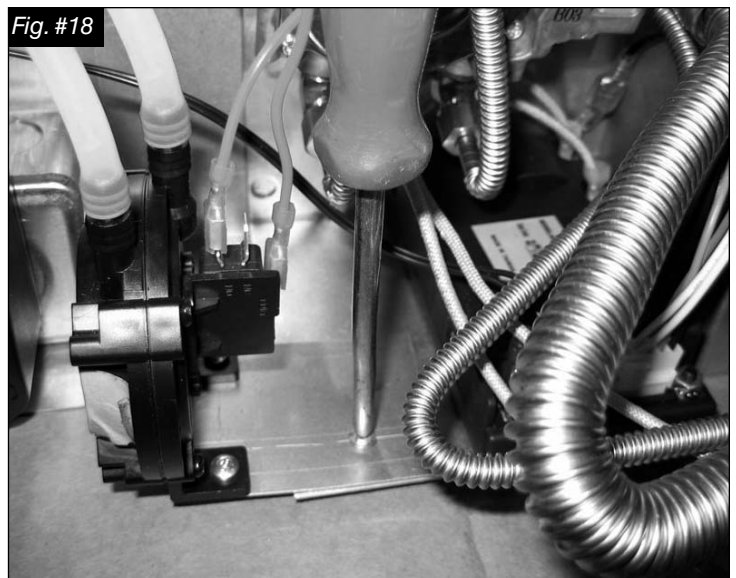



Pressure Switch Installation - (TCWS.54CE2 ONLY)

1. Connect the pressure switch jumper wires to the orange wire (Fig. # 19).
2. Attach the silicone tube from the upper pressure tap on the power vent adaptor (Fig. #4) to the “low” port of the pressure switch. Attach the other silicone tube from the lower pressure tap to the “high” port of the pressure switch (Fig. #20).
3. Secure the pressure switch in the control box using the screw provided (Fig. #21).
4. Continue with installation and reassemble all of the parts previously removed.

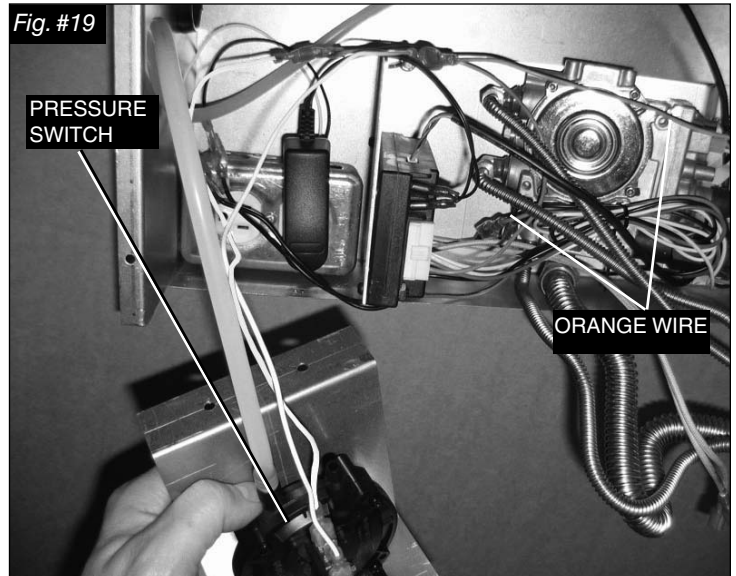

This power vent system can only run on 115 V AC. Before operating the unit, the battery backup located behind the wall switch receiver must be removed. The red “Low Battery” light will continue to flash. This is not a fault indicator.






WARNING: This switch must be installed in a vertical position and will not function if installed otherwise (Fig.21).

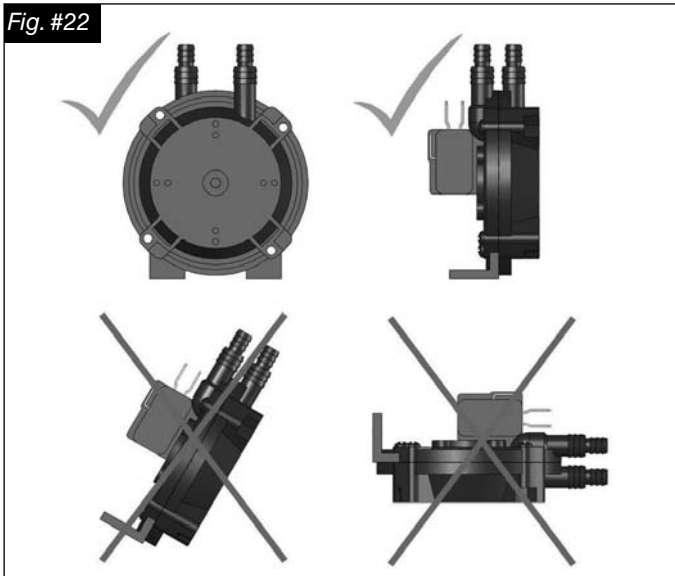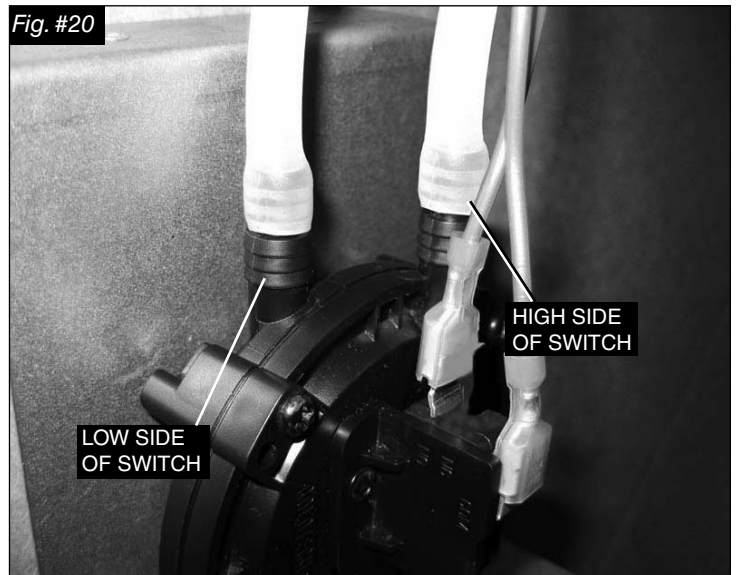


Fan Wiring

The Flush Mount Power Vent assembly has an electrical connector block mounted internally. The external wiring from the main voltage/control module should be connected to this block. Follow the steps below to access this block.

1. Remove the 2 top and 2 bottom screws securing the end cap only. Remove the cover by lifting it up and off the studs. (Fig #23 & #24).
2. Remove the 6 screws securing the blower grill to the assembly and remove grill. (Fig #25)
3. Run the power supply wire from the fireplace to the connector block inside the power vent assembly. (Fig #26 & #27).
Connect wires as shown. Connect ground to ground screw and tighten strain relief.
4. Reposition blower grill and secure in place with previously removed screws. Place the end cover back onto the upper tabs and secure in place with 2 screws on top and 2 on bottom.

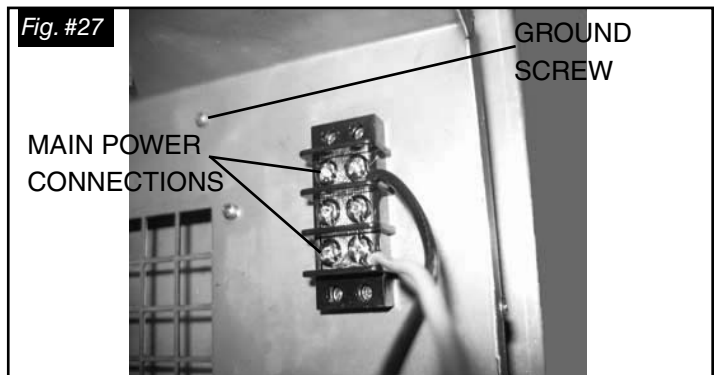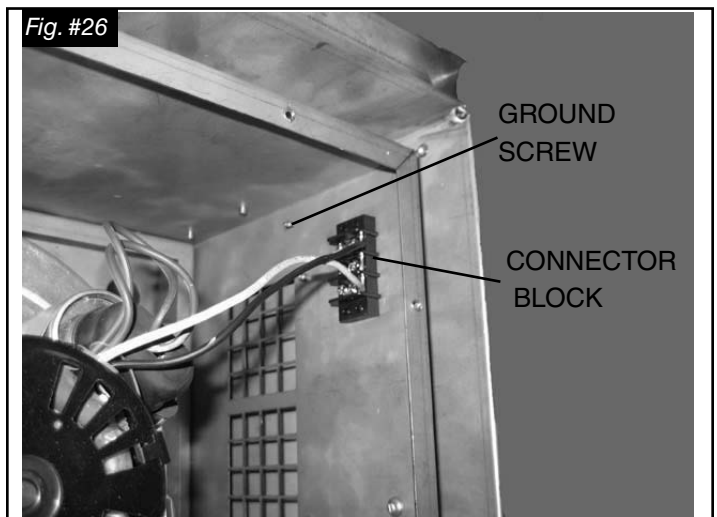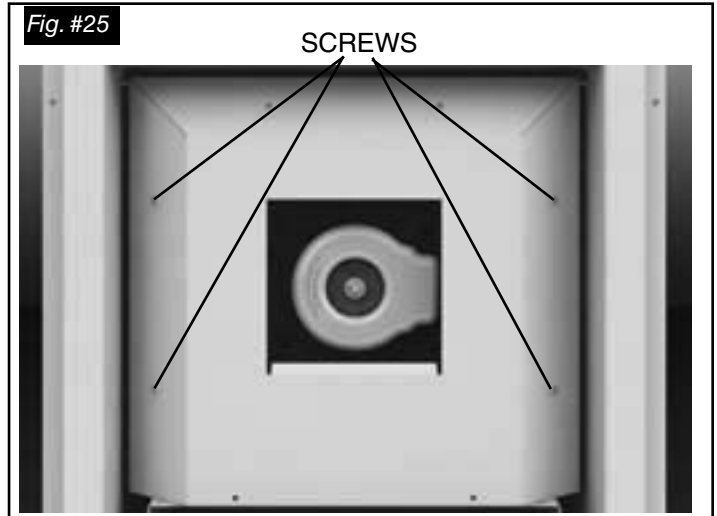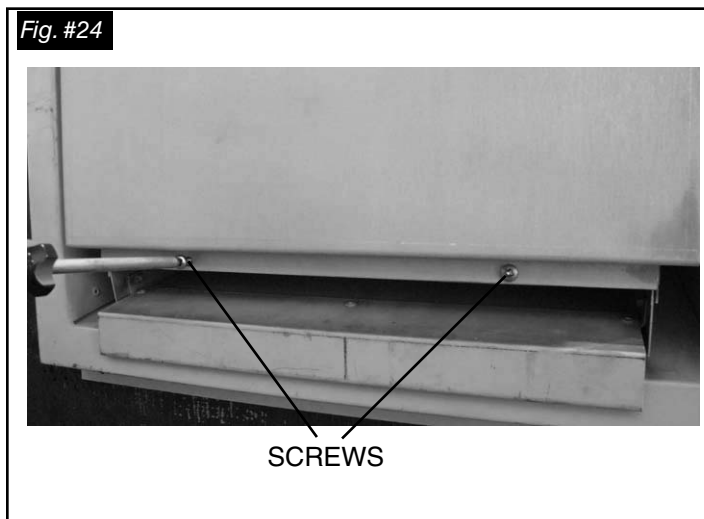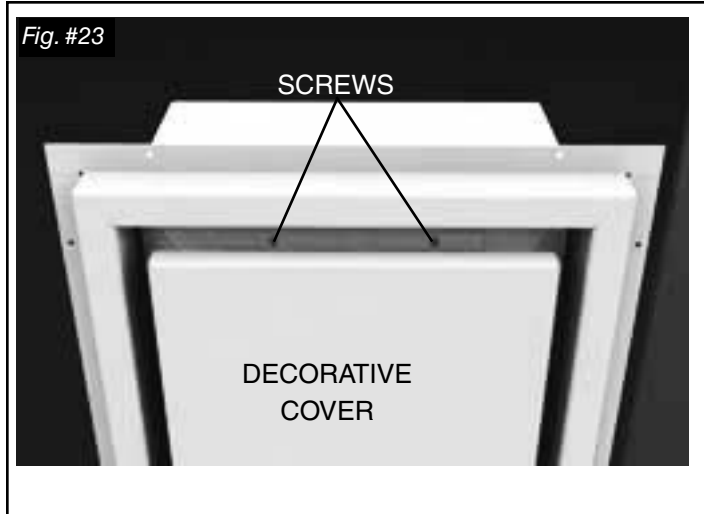

Dimensions

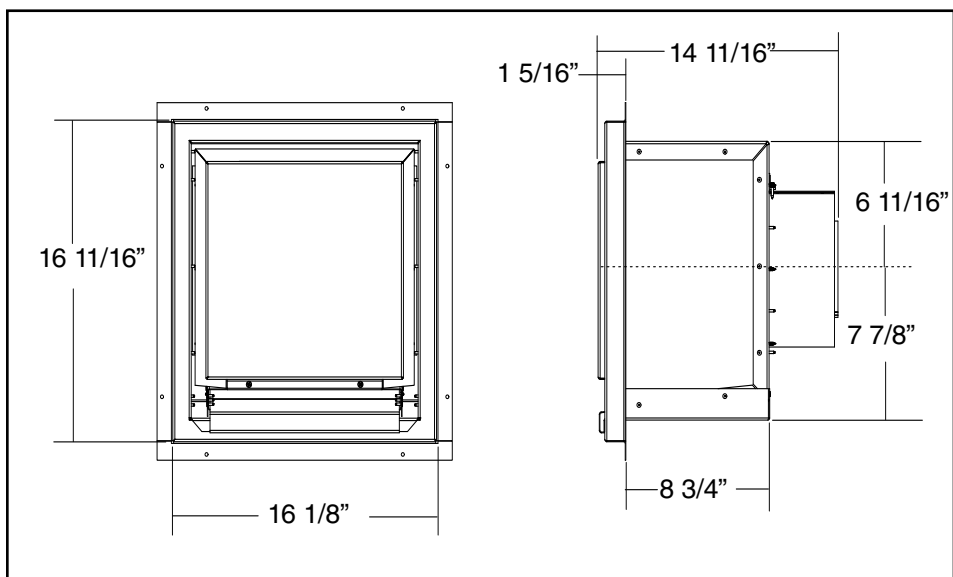


PAINT:

The vent terminal comes pre-painted with ThurmaloX 230 Series paint by Dampney Co., but can be painted to match your wall finish color using high temperature paint that can withstand temperatures of at least 250 degrees Fahrenheit or 120 degrees Celsius.

Ensure your paint is compatible with ThurmaloX 230 Series paint.

NOTE: If this powervent is to be installed in a TC30 then it should use the full restrictor as shown in Fig. #28.

NOTE: For all other units use the restrictor shown in Fig. #29.

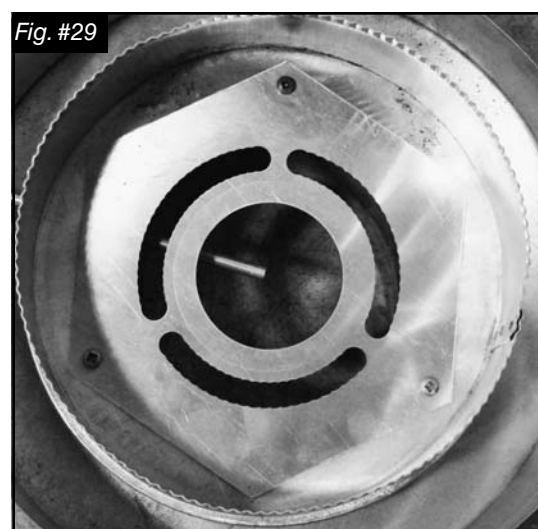

Venting Components

SIMPSON DURAVENT COMPONENTS

Number	Description
1208	6" Pipe Length
1207	9" Pipe Length
1206	12" Pipe Length
1204	24" Pipe Length
1203	36" Pipe Length
1202	48" Pipe Length
1211	11" to 14-5/8" Pipe, Adjustable
1217	4-10" Pipe, Adjustable
1245	45° Elbow
1290	90° Elbow
1240	Round Ceiling Support /Wall Thimble Cover
1241	Cathedral Ceiling Support Box
1242	Wall Firestop
1247	Wall Thimble
1263	Ceiling Firestop
1288	Wall Strap

SECURE VENT COMPONENTS

Number	Description
SV5L6	6" Pipe Length
SV5L12	12" Pipe Length
SV5L24	24" Pipe Length
SV5L36	36" Pipe Length
SV5L48	48" Pipe Length
SV5LA	6" Pipe, Adjustable
SV5LA12	12" Pipe, Adjustable
SV5LA24	24" Pipe, Adjustable
SV5E45	Swivel 45° Elbow
SV5E90	Swivel 90° Elbow
SV5CSB	Adjustable decorative sq. cathedral support
SV5AC	Collar for decorative sq. cathedral support
SV5SU	Universal support
SV5SD	Floor support
SV5BM	Wall band
SV5RSA	Attic radiation shield
SV5RSM	Wall radiation shield
SV5BF	Firestop

SELKIRK DIRECT-TEMP


Number	Description
1605006	6" Pipe Length
1605009	9" Pipe Length
1605012	12" Pipe Length
1605018	18" Pipe Length
1605024	24" Pipe Length
1605036	36" Pipe Length
1605048	48" Pipe Length
1605082	4-10" Pipe, Adjustable
1605215	45° Elbow
1605230	90° Elbow
1605424B	Cathedral ceiling support box (blk)
1605500	Firestop spacer
1605460B	Wall thimble (blk)
1605430	Wall support band

ICC MODEL EXCELDIRECT

Number	Description
TC-5DL6	6" Pipe Length
TC-5DL1	12" Pipe Length
TC-5DL2	24" Pipe Length
TC-5DL4	48" Pipe Length
TC-5DLF	36" Flexible Length
TC-5DLT	12" Pipe, Adjustable, Galvalume
TE-5DE45	Swivel 45° Elbow, Galvalume
TE-5DE90	Swivel 90° Elbow, Galvalume
TM-5SS	Square Support / Radiation Shield
TM-5RDS	Round Support / Radiation Shield
TM-5CS	Cieling Support / Firestop
TM-OS	Offset Support
TM-SR	Roof Support
TM-WS	Adjustable Wall Support
TM-5WT	Insulated Wall Thimble
TM-5TR	Trim Ring, Black
TM-5AS	Attic Radiation Shield / Firestop

Wiring Diagram

Wiring the Optional Power Vent Kit provided by Town & Country

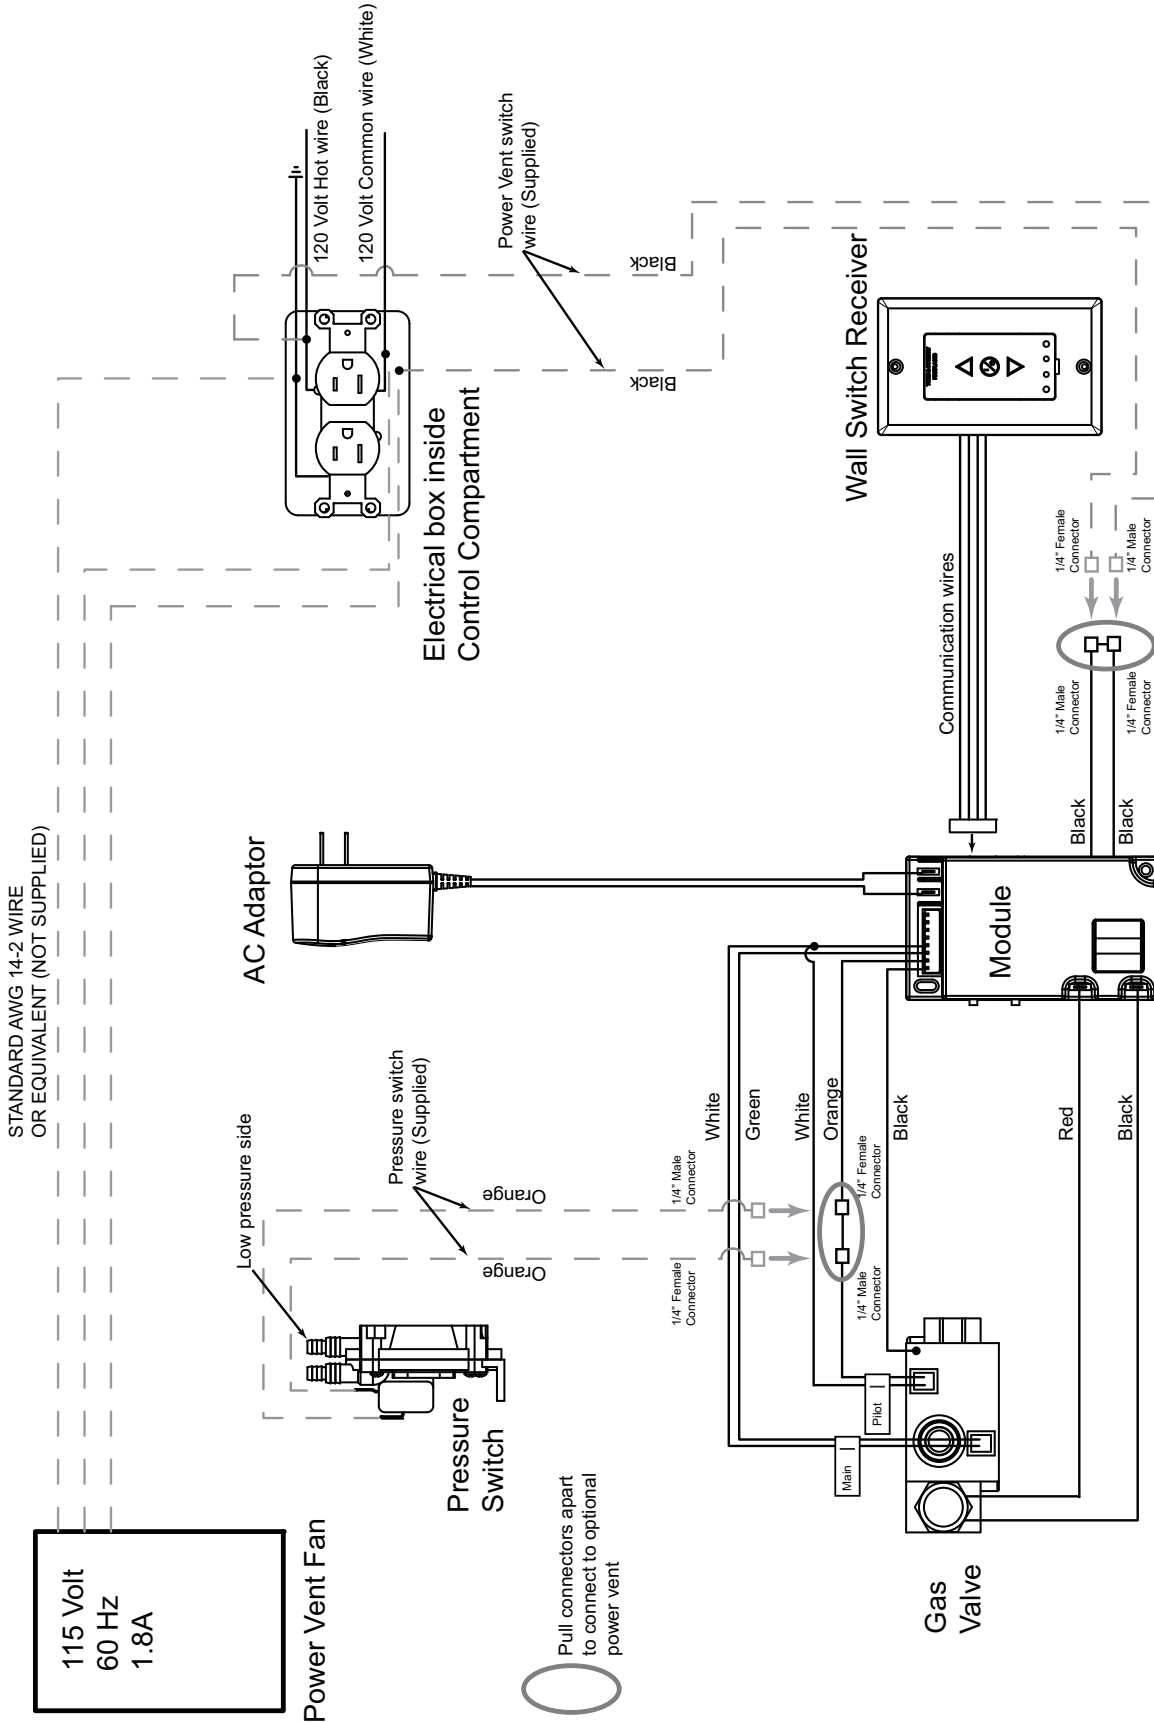


All electrical installations should be performed by a qualified electrician to the Canadian and U.S. National Electrical Codes (CSA C22.1 for Canada), (ANSI/NFPA 70 for the U.S.) and/or local electrical codes.

Replacement Parts

ITEM	PART No.	DESCRIPTION	QTY
1	TCVT.8043	FLUSH MOUNT POWER VENT ASSY.	1
2	8043	BLOWER GRILL	1
3	8240	TUBE, 5/16" OD, 1/16" THICK	2
4	8043.5	GRILL COVER	1
5	8020.5	INNER WALL PLATE	1
6	5096.816	VENTING ADAPTER	1
*7	TCVT.9280	PRESSURE SWITCH ASSEMBLY	1
8	TCVT.507156C	POWER VENT SWITCH WIRE	1
9	5068.8065	1/4" LDF PAPER GASKET	1
10	TCVT.8035	TCVT.FMPV OUTER CASING ASSEMBLY	1
11	5024.63	BLOWER, POWERVENT	1
12	TCVT.80285WLD	WALL SLEEVE ASSEMBLY	1
13	8029	WALL PIPE COVER	1

* NOT SHOWN

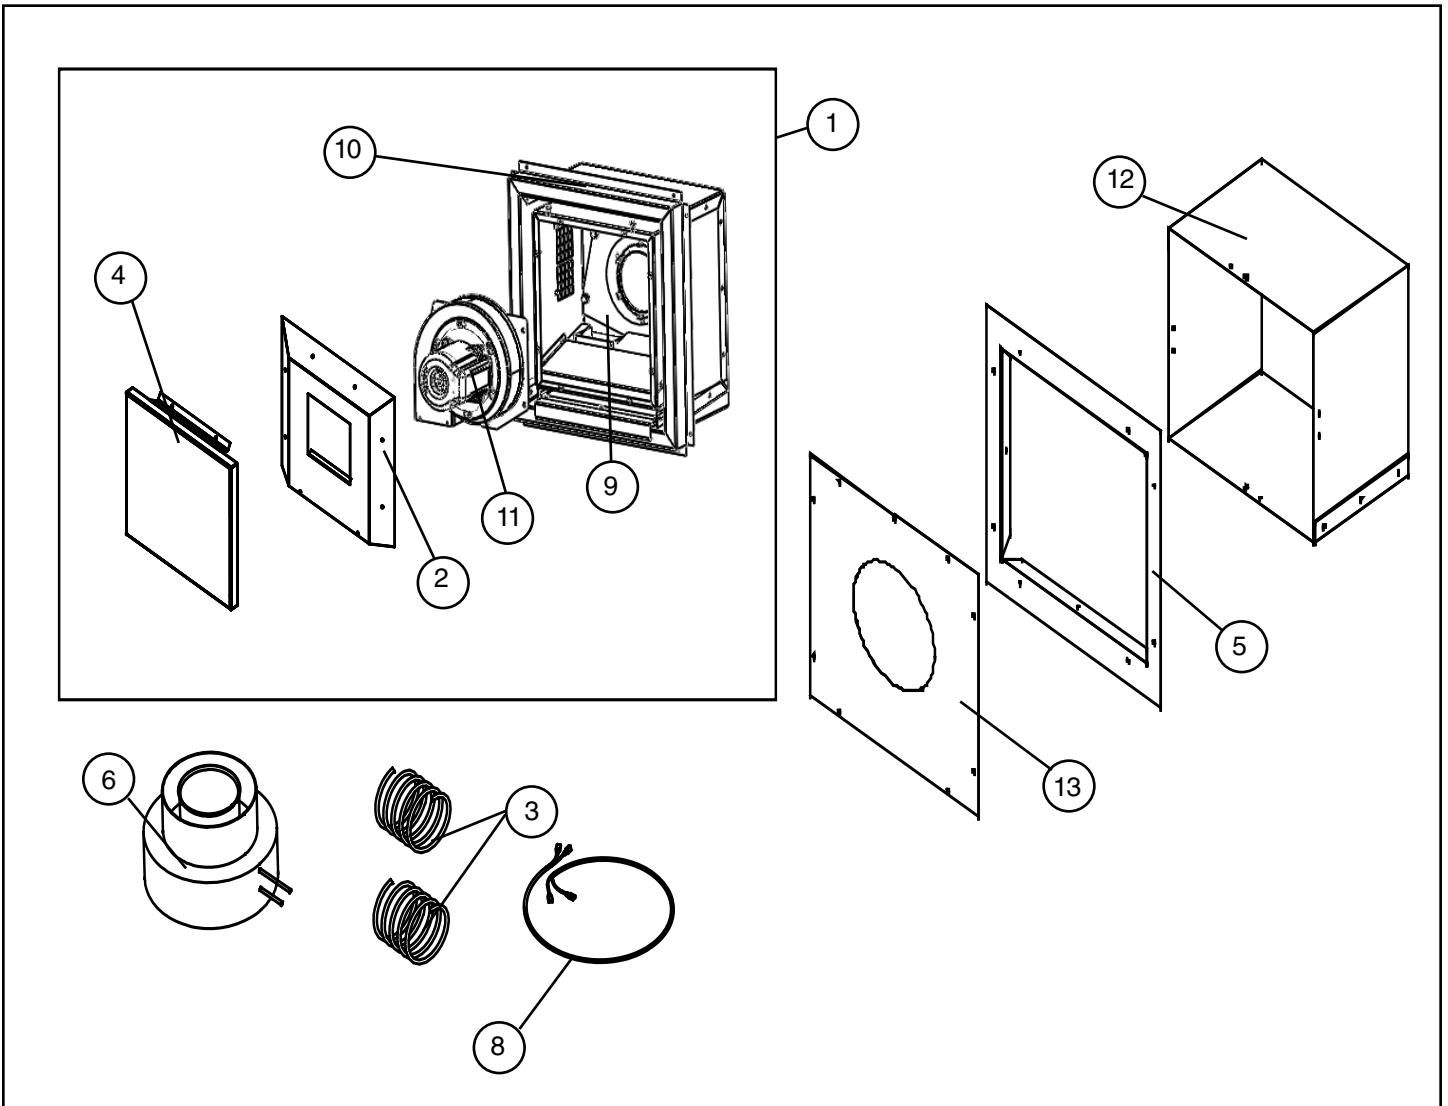



TOWN & COUNTRY
L U X U R Y F I R E P L A C E S

TECHNICAL SUPPORT: (250) 748-1184
www.townandcountryfireplaces.net
2975 Allenby Rd., Duncan, BC V9L 6V8