

**INSTALLER: Leave this manual with the appliance.  
CONSUMER: Retain this manual for future reference.**

These instructions are supplementary to the Installation and Operating Instructions supplied with the fireplace and should be kept together. Refer to the Installation and Operating Instructions for proper gas supply, safety requirements and operating instructions



**TOWN & COUNTRY**  
L U X U R Y F I R E P L A C E S

# **TC30 COUNTRY HOME BURNER KIT INSTRUCTIONS (NATURAL GAS ONLY)**



**PART#  
TC30.NG02CN  
For TC30 Series C**



## Contents of Package

BURNER ASSEMBLY

7 PCS LOG SET

HARDWARE PACKAGE

EMBER MATERIAL

LOG GRATE



## Burner/Grate Installation

1. Place the keyhole slots in the burner over the two screws located in the firebox base. (Fig. #1 & 1a)
2. Slide the burner back to engage the screws in the small part of the keyhole slot and tighten screws. (Fig. #1b)
3. Remove access cover from side of firebox(Fig. #1c)

Fig. # 1a

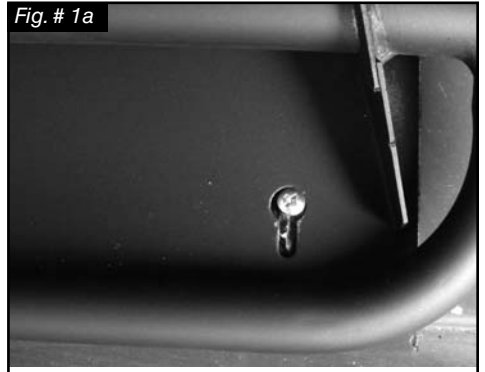


Fig. # 1b

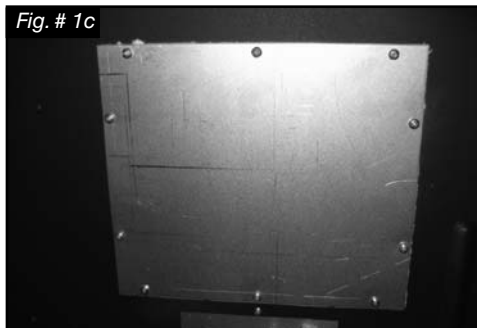


Fig. # 1





SCREWS

Fig. # 1c




## Burner/ Grate Installation

4. Secure the electrical bulkhead plate and gasket to the firebox. (2 screws) Attach the ignition and sensor wires to the module. Red end to the connector marked by the red dot, white end to the connector marked by the white dot  
Fig.#2 & Fig.#3

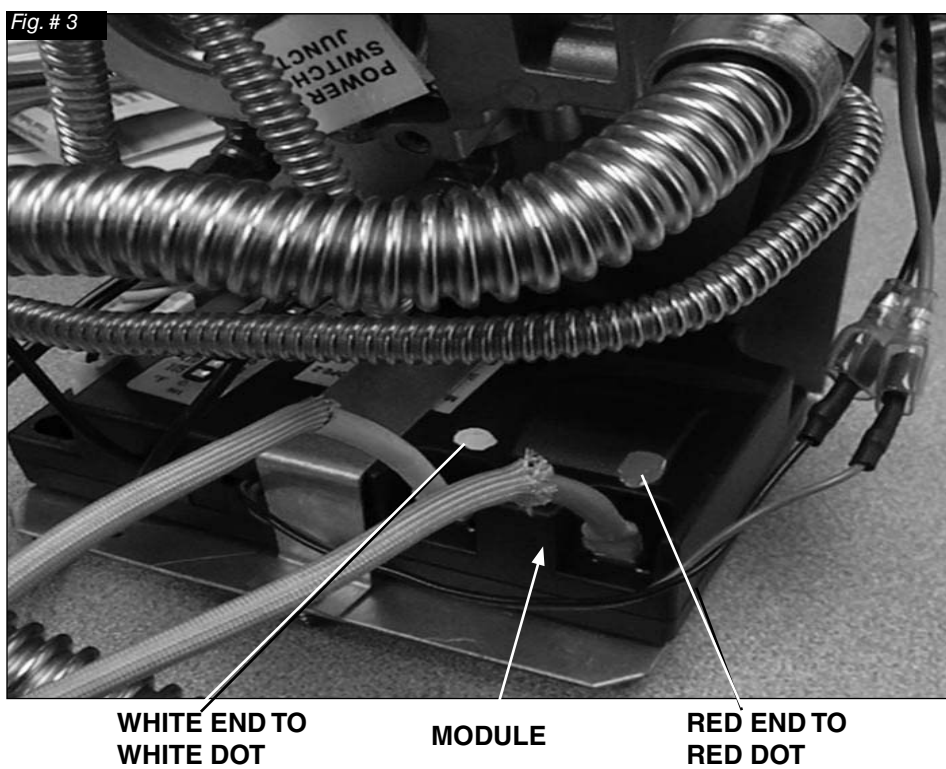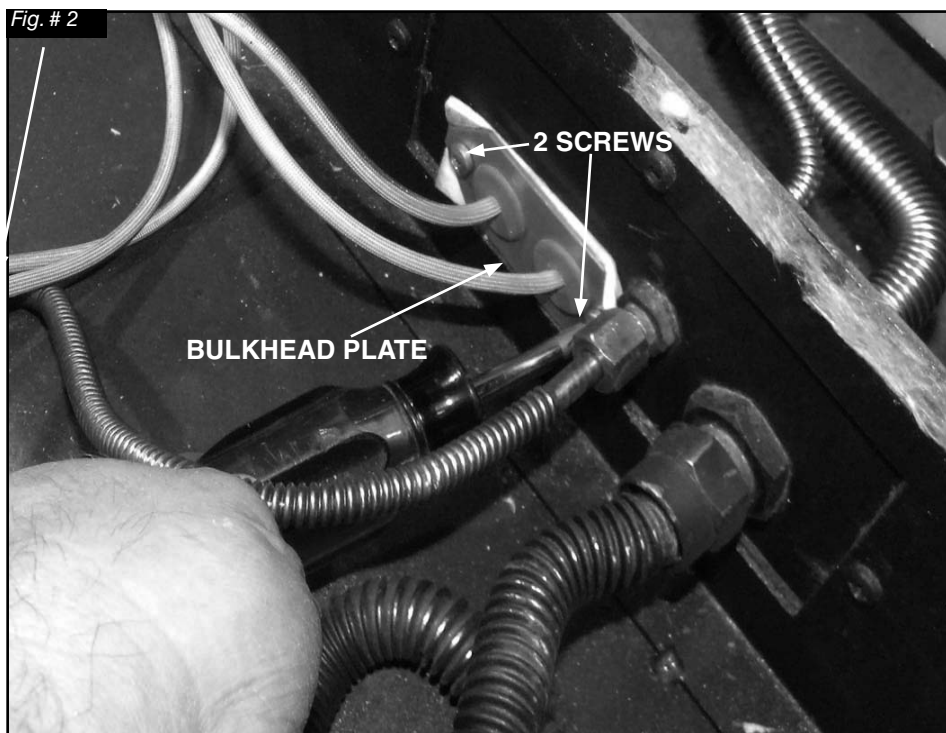

5. Attach the pilot and gas supply tubes to the bulk head fitting and tighten. (Fig. # 3b) Ensure the connections are gas tight. Conceal the spark and sensor wires below the supply tubes.


**A panel set must now be installed. See Installation and Operating Instructions manual for details.**

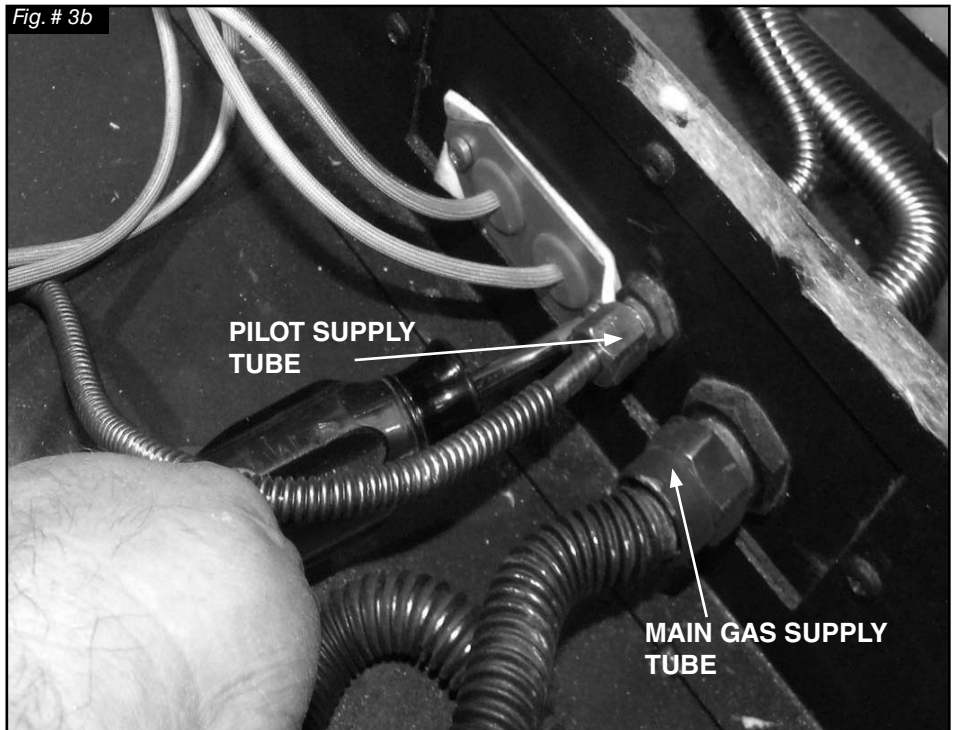

6. Position the slots of the grate securing brackets over the holes in the floor shield and secure with the two screws (Fig. # 4).



7. Attach rear deflector to rear of grate using the two screws provided (Fig. # 5).

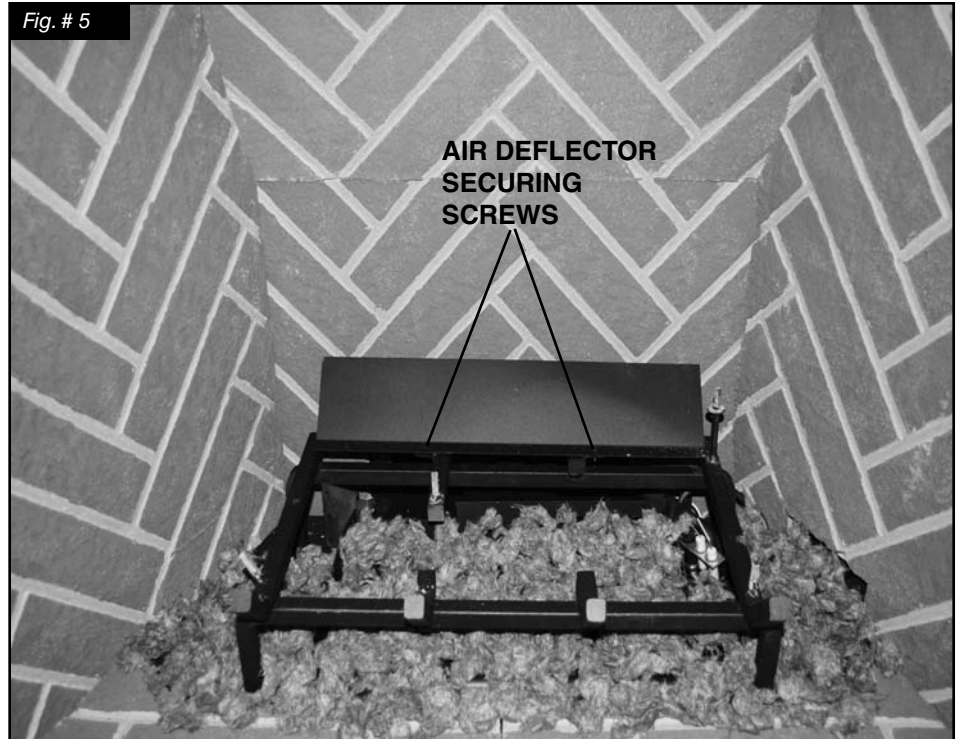

## Ember Material Placement

A large bag of ember material is shipped with the fireplace and needs to be installed to ensure optimum performance and flame appearance.

Pull apart the material into ember size pieces (approximately 1" squares) and gently place them into the burner pan. Do not compress, leave it loose for best performance.

Fill the burner pan level with the top of the pan at rear, and gradually slope forward to the firebox floor at the front, covering both burner tubes.

Place remaining ember material outside of the burner pan as desired to cover-up gas lines and brackets.

Note: Ember material placement and amount will affect flame appearance. More ember material results in lower flame height. Add or remove as needed until desired flame affect.



**GLOWING EMBERS**

# Log Placement

Gas plumbing and vent connections should be completed before proceeding.

The logs are fragile, and should be handled with care. Unpack and inspect log set. There should be a total of seven logs.

Position the logs as indicated by the following pictures. The three main logs have holes and / or pins. Engage each pin in the corresponding holes. The four smaller logs do not have holes or pins. They rest in position. Locate as per the diagrams (fig. # 6-13).

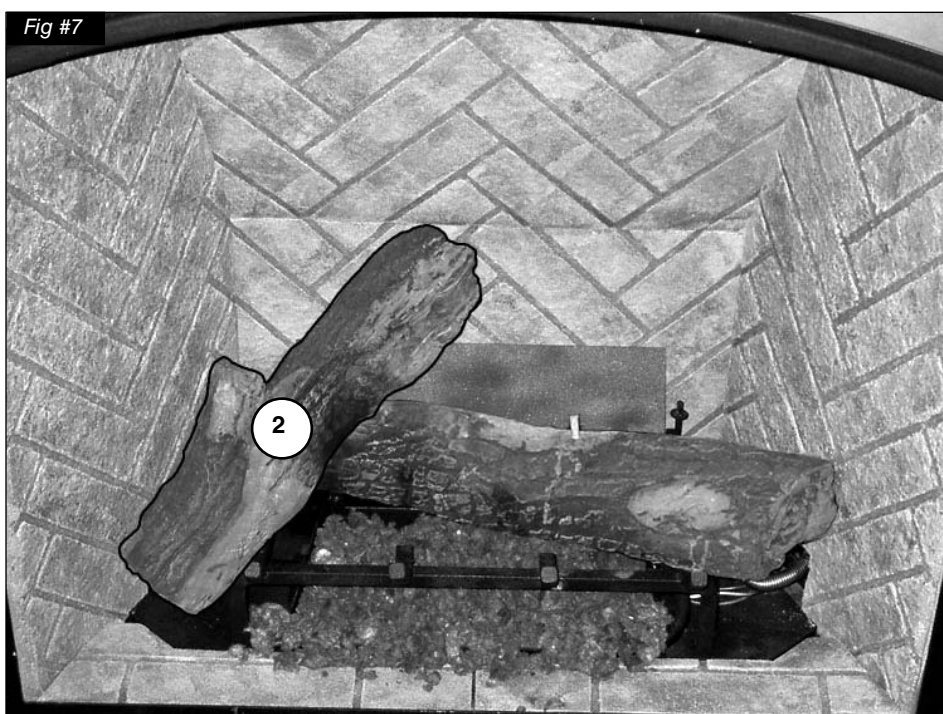
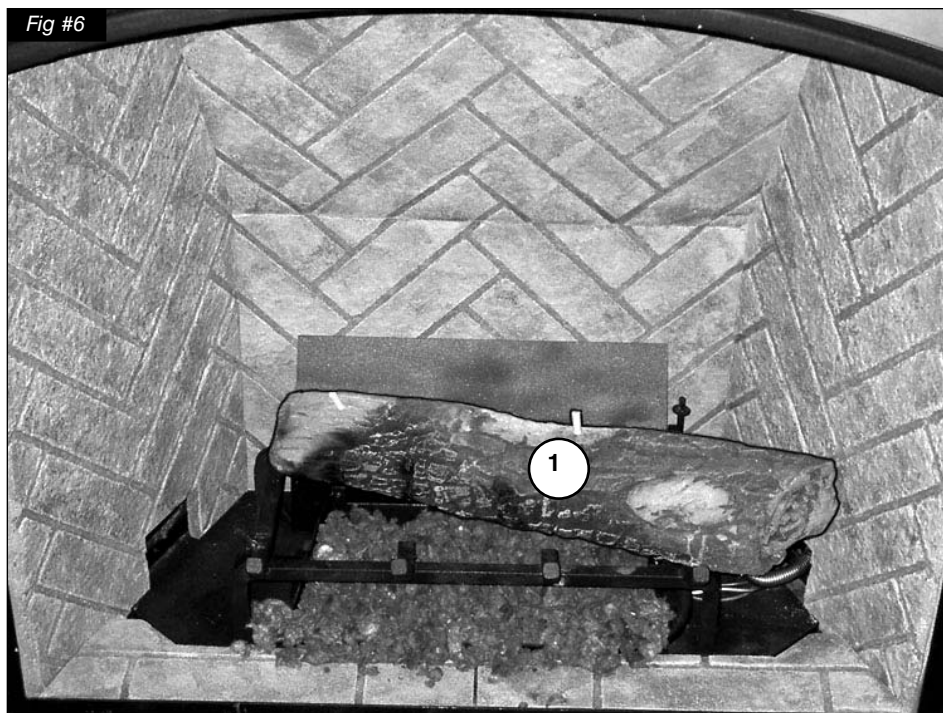


Fig #8



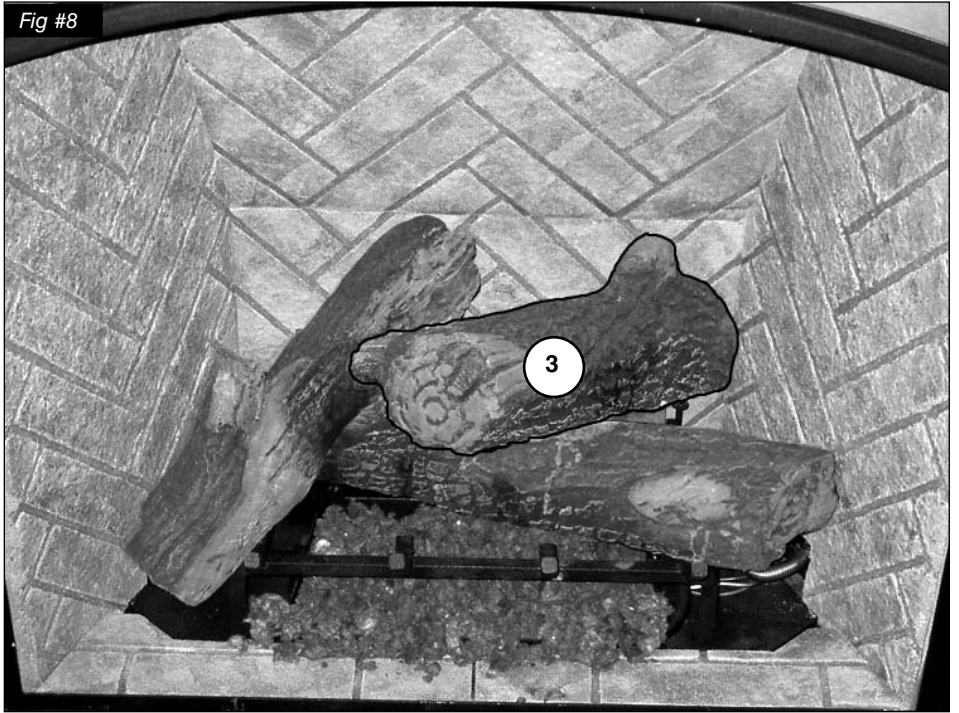


Fig #9



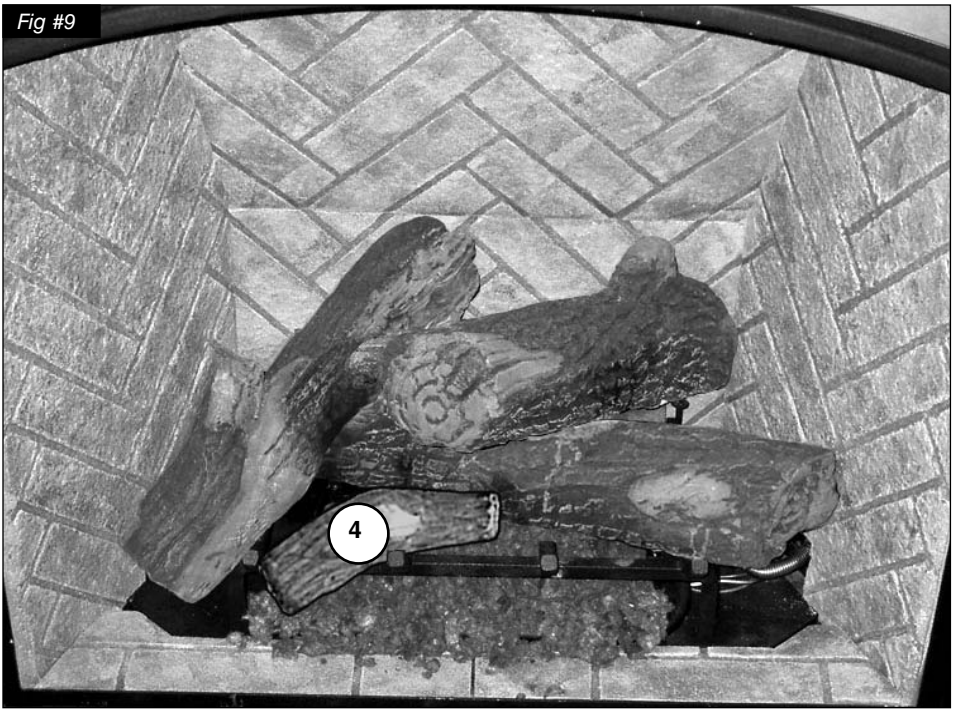

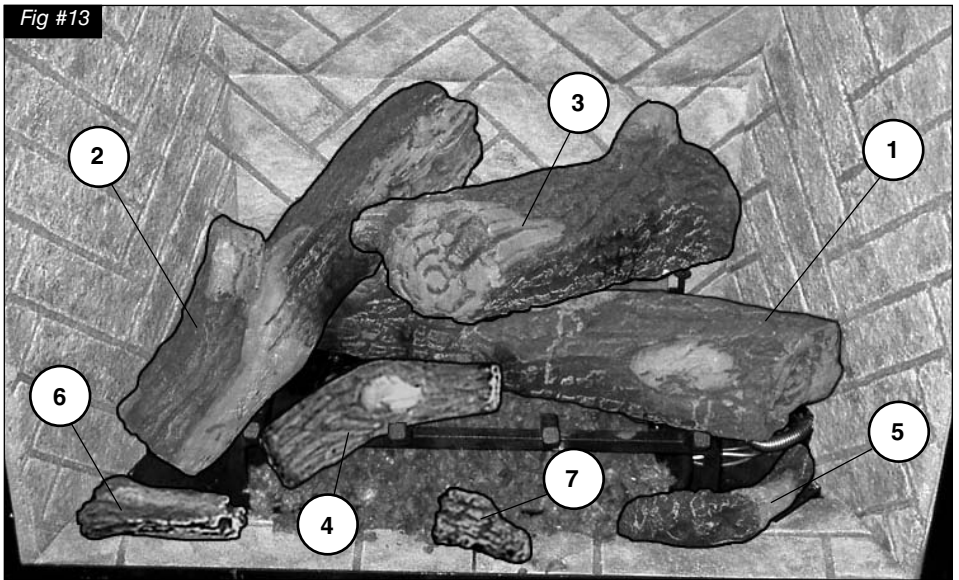

**Note:**  
Improper placement of logs will cause sooting on internal parts and glass. The logs may need to be repositioned slightly to avoid excessive flame impingement.

# Gas Pressure Check

**Note:** To test the gas pressure, turn off the gas supply before removing the blanking plug from the supply pressure test port or manifold pressure test port.

**Verify gas pressures with the fireplace lit and on the highest setting.**

1. Remove the blanking plug from the pressure test port. The plug is located between the right side lintel and firebox side. (Fig. #14)
2. Thread the extension test fitting into the open test port. (Fig. #15)
3. Attach a pressure gauge onto the fitting.
4. When testing is complete remove the extension test fitting and replace the plug. Thread sealant will be required to ensure a gas tight connection.

Fig #14



Fig #15


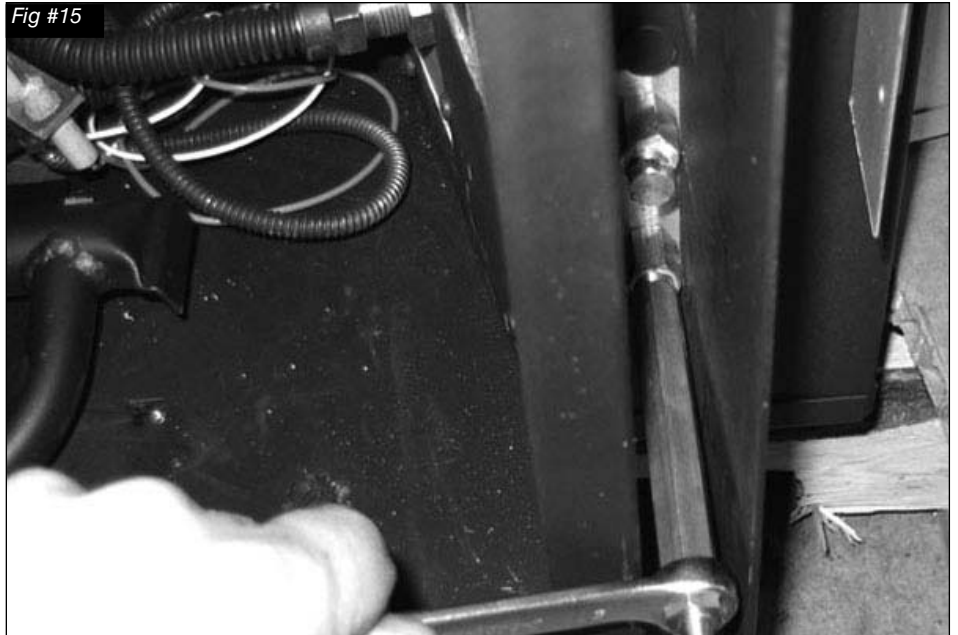


Fig #16

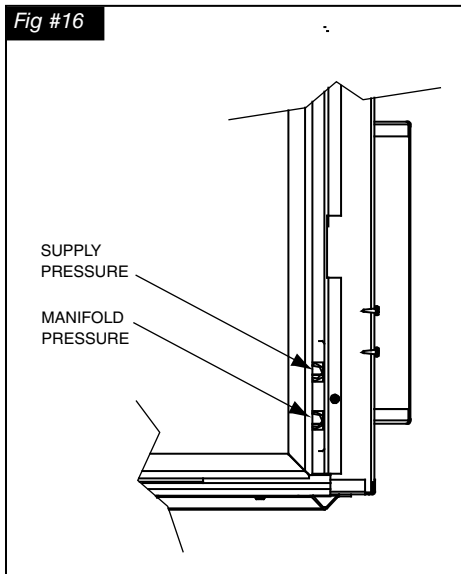

## Correct gas pressure requirement:

Supply Pressure	Natural Gas
<b>Min. Pressure</b> (For purpose of input adjustment)	<b>5.0" WC</b>
<b>Max. Pressure</b>	<b>13.9" WC</b>
<b>Manifold Pressure</b>	
<b>Maximum</b>	<b>3.8" WC</b>
<b>Minimum</b>	<b>2.1" WC</b>

## Burner Flame Adjustment

The air shutter on the burner tube controls the primary combustion air to the gas burner and is preset at the factory for natural gas fuel. Some adjustment may be necessary to obtain desired flame and to eliminate carbon deposits. Evaluate flame appearance after the fireplace has reached operating temperature. See Fig. #17 for proper flame pattern.

Open primary air shutter if the logs, glass, and firebox have carbon accumulation and/or the flames are long, dark and stringy. The shutter may also be opened to enhance the ember material glow and lessen the flame height.

Fig. # 17



**Caution: Proper air shutter setting is a must.**

The flame should be just orange and “lazy”. It should NEVER be set to create sooting on internal parts and glass.

**To Adjust:** (See Fig. #18)

1. Open and remove window frame and set aside. See "Window Frame Removal" section found in the Installation and Operating Instructions manual.
2. Remove the log set and set aside.
3. Remove the air deflector from the log grate.
4. Loosen the screw in the Primary Air Shutter.
5. Rotate the shutter to increase or decrease the amount of primary air.
6. Re assemble in reverse order.

Fig. # 18



PRIMARY AIR SHUTTER  
(Shown in closed position)

# Replacement Parts

(WHEN ORDERING, INCLUDE PART NUMBER WITH DESCRIPTION)

ITEM.....DESCRIPTION.....PART NO.

#1.....COUNTRY HOME BURNER KIT.....TC30.NG02CN2

#2.....7 PCS LOG SET .....5098.746148


#3.....ORIFICE, NATURAL GAS (#32).....5021.332.A

ITEM.....DESCRIPTION.....PART NO.

#4.....PILOT ASSEMBLY, CONVERTIBLE ..TCRP.5005025

#5.....MAIN SUPPLY TUBE.....5019.223

#6.....PILOT TUBE .....5019.225

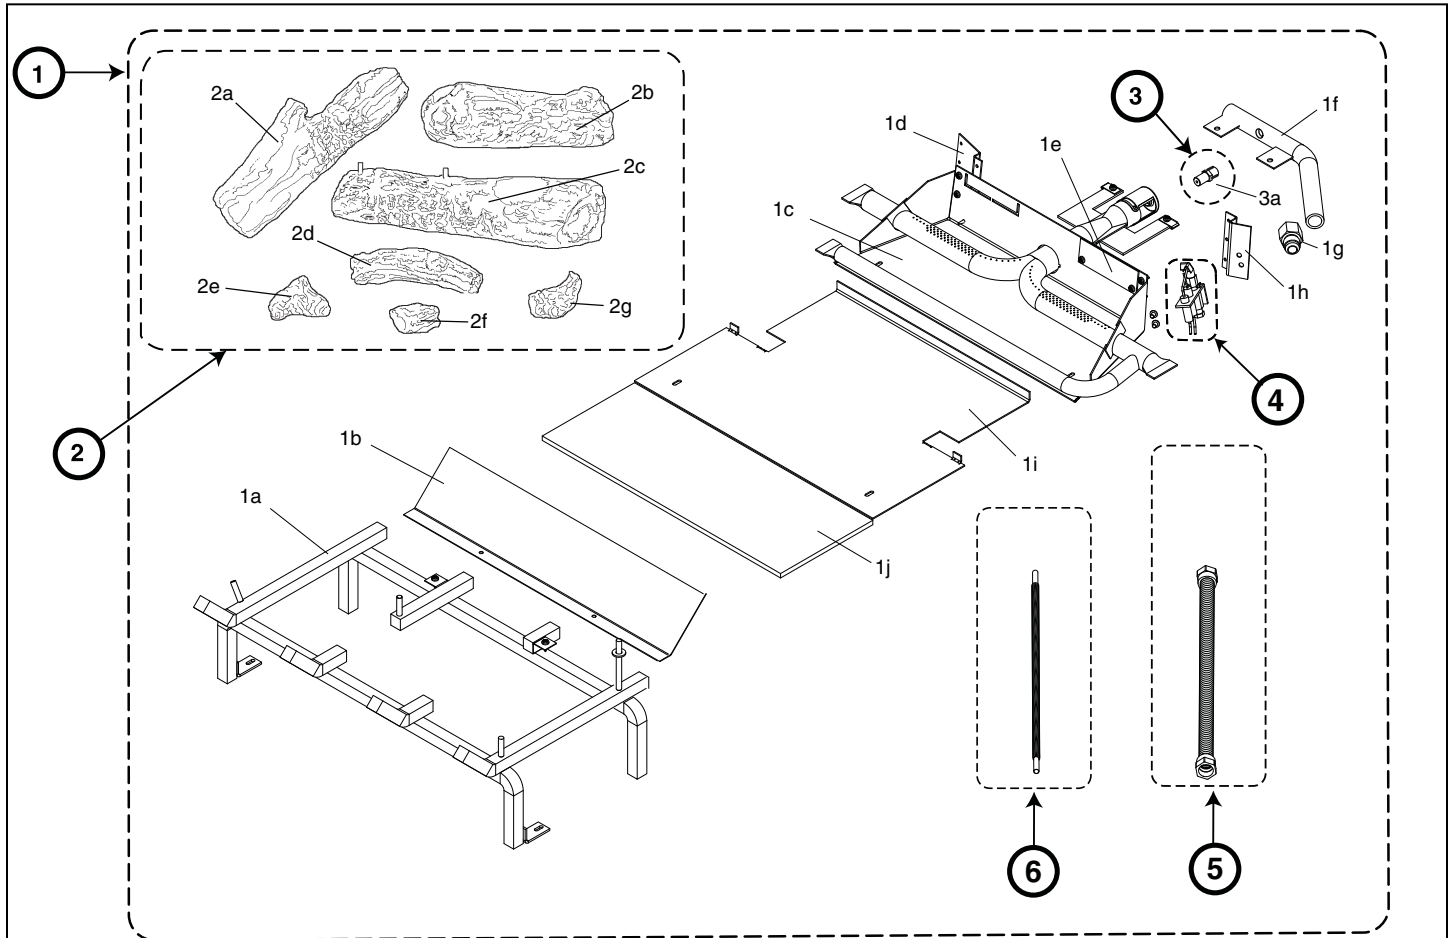

## KIT CONTENTS:

### #1.... BURNER ASSEMBLY

- 1a GRATE
- 1b AIR DEFLECTOR
- 1c BURNER TRAY
- 1d PILOT SHIELD
- 1e BLOCKER PLATE
- 1f MANIFOLD
- 1g 1/2 PIPE TO 1/2 TUBE CONNECTION
- 1h PILOT BRACKET
- 1i HEAT SHIELD
- 1j HEAT SHIELD INSULATION

### #2.... 7 PCS LOG SET

- 2a BASE LOG
- 2b TOP LEFT LOG
- 2c TOP RIGHT LOG
- 2d CENTER CHUNK
- 2e BOTTOM LHS CHUNK
- 2f BOTTOM CENTER CHUNK
- 2g BOTTOM RHS CHUNK

### #3.... ORIFICE, NATURAL GAS (#32)

### #4.... PILOT ASSEMBLY, CONVERTIBLE

### #5.... MAIN SUPPLY TUBE

### #6.... PILOT TUBE









TOWN & COUNTRY  
L U X U R Y F I R E P L A C E S

**Technical support: 1-250-748-1184**  
**Web site: [www.townandcountryfireplaces.net](http://www.townandcountryfireplaces.net)**  
**2975 Allenby Rd., Duncan, BC V9L 6V8**

Printed in Canada