

T&C CLEAN VIEW SCREEN

Assembly and Installation

1. Open the box and remove the screen from the packaging
2. Using a No.2 Philips or flat head screwdriver, unscrew the 2 screws attached to each of the 2 cast iron handles.



3. Place the handles on the outside of the screen, with the T&C logo configured as shown below.



4. Re-attach each handle using the 2 screws removed in step 2.
5. For optional screen attachment, see instructions on following page.



6. Place the screen in front of the fireplace as shown.




T&C CLEAN VIEW SCREEN


Decorative Screen Attachment Instructions



4. Slip the hook around the frame of the screen as shown.

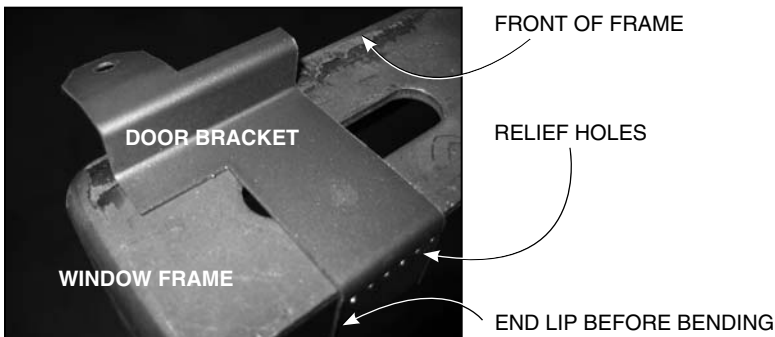

1. Open window as outlined in your user manual. Position the Latch so the back end is flush with the back of the window frame.

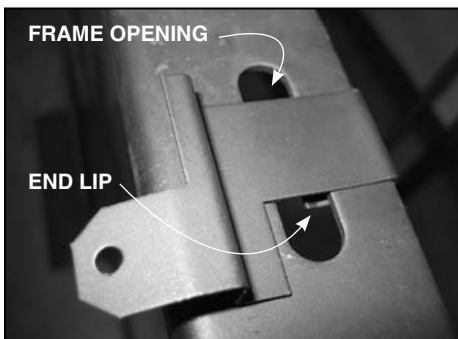

2. Bend the latch towards the front of the stove at the provided relief holes until the end lip is inside the opening in the window frame.
3. Close your window frame and ensure it is locked in place.



5. Crimp the hook into place.



6. Position screen so it is near the Stove and slip the hook into the bracket.